

**Forlengelsesseksjon**  
*Extension section*

| Varenummer<br><i>Item number</i> | Passer<br><i>Fits</i> |
|----------------------------------|-----------------------|
| 600290                           | 602xxx (8 mm)         |
| 600390                           | 603xxx (9,5 mm)       |
| 600590                           | 605xxx (11 mm)        |
| 600690                           | 606xxx (13 mm)        |
| 600890                           | 608xxx (16 mm)        |




A product by Nøsted &

## SMT Standard

**Forlengelse**  
*Extension*



For 8, 9.5 and 11 mm SMT

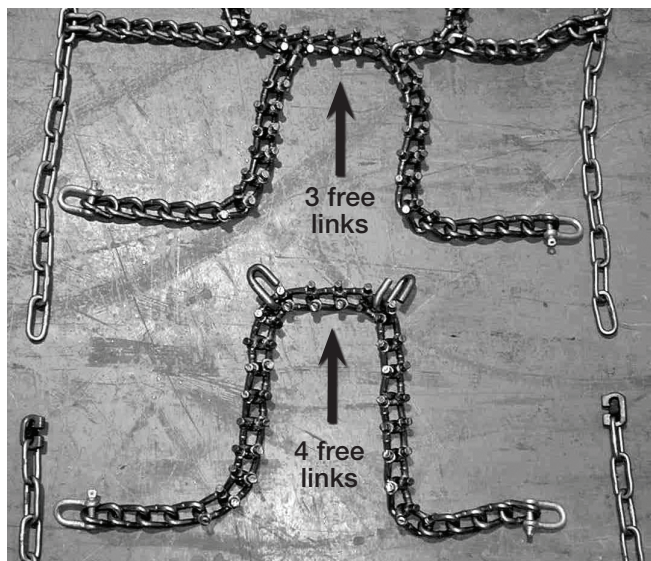

Settet består av:


- 2 stk broddlenker
- 4 stk S-kroker
- 4 stk Sjakler
- 4x5 ledd m/sidekjetting
- 4 stk Flexiledd for skjøting av sidekjetting

The kit consists of:

- 2 pcs Studded chains
- 4 pcs S-hooks
- 4 pcs shackles
- Side chain, 4 lengths with 5 links in each length
- 4 pcs Flexi links

1. Fest S-krokene på forlengelses seksjonen slik at antall frie ledd mellom de er ETT MER enn på tilsvarende sted på kjettingen som skal forlenges.
2. Kapp vekk overskytende kjetting i begge ender av broddlenken.
3. Monter sidekjettingen ved hjelp av Flexileddene.

1. Fasten the S-hooks with ONE MORE free link between them, than it is on the chain pattern that are to be extended.
2. Remove eventually free links in each end.
3. Extend the side chain by using the Flexi links.

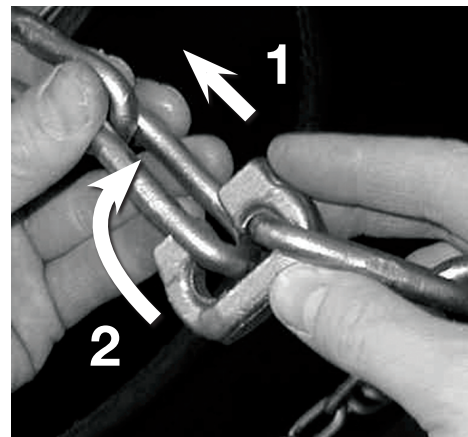

Flexileddet monteres slik:

1. Kjettingløyken som skal monteres stikkes inn i leddet.
2. Vri kjettingen deretter 90 grader.

Flexi link mounting:

1. Insert the chains end link into the Flexi link.
2. Then turn the chain link 90 degrees.