


Mounting instruction - extension kit.


For 8, 9,5 and 11mm SMT

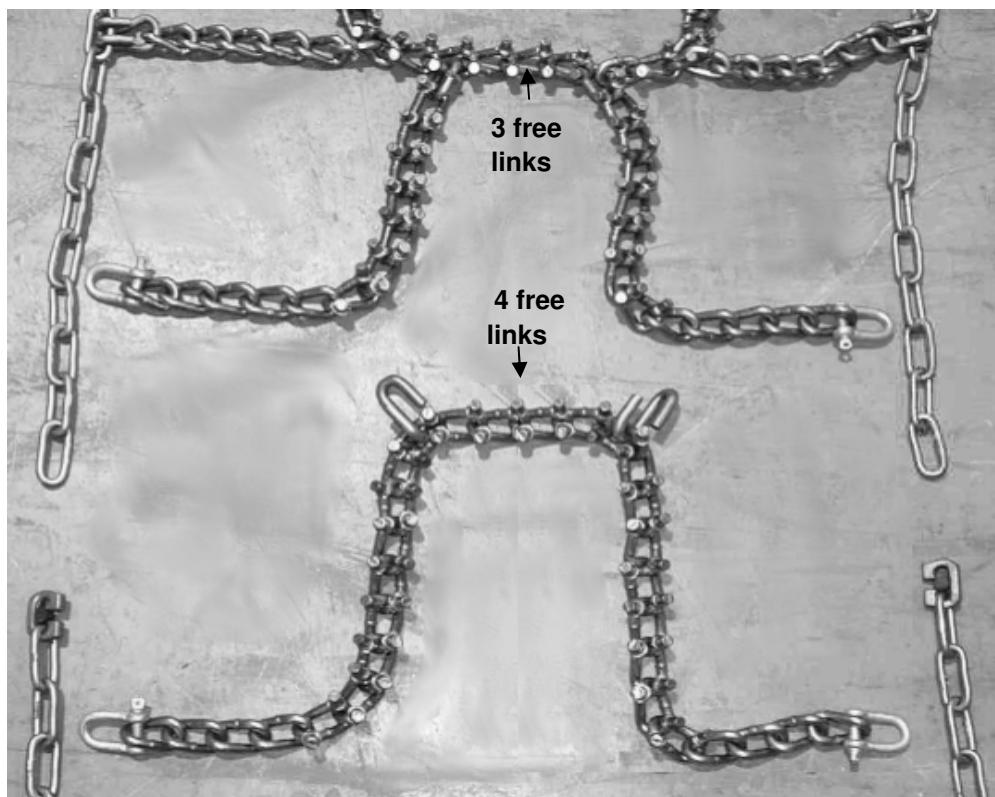

The kit consists of:

- 2 pcs Studded chains.
- 4 pcs S-hooks.
- 4 pcs shackles.
- Side chain, 4 lengths with 5 links in each length.
- 4 pcs Flexi links.

1. Fasten the S-hooks with ONE MORE free link between them, than it is on the chain pattern that are to be extended.
2. Remove eventually free links in each end.
3. Extend the side chain by using the Flexi links as illustrated below.

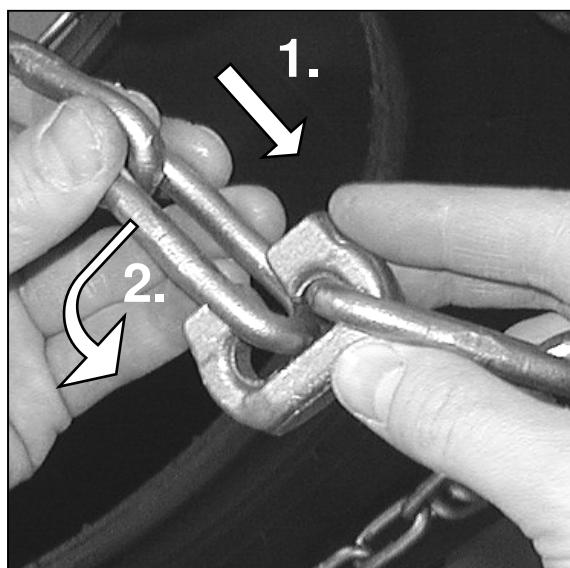

Flexi link mounting.

1. Insert the chains end link into the Flexi link.
2. Then turn the chain link 90 degrees.